

Use lower holes on both rod and base brackets. Otherwise, the cylinder may hit the parallel arm tube when the row unit is all the way up and the row cleaner is all the way up.


Mount cylinder up side down with ports coming out the bottom.



Feed tubing behind the cylinder through the base bracket.



Secure tubing to parallel arms with cable ties.

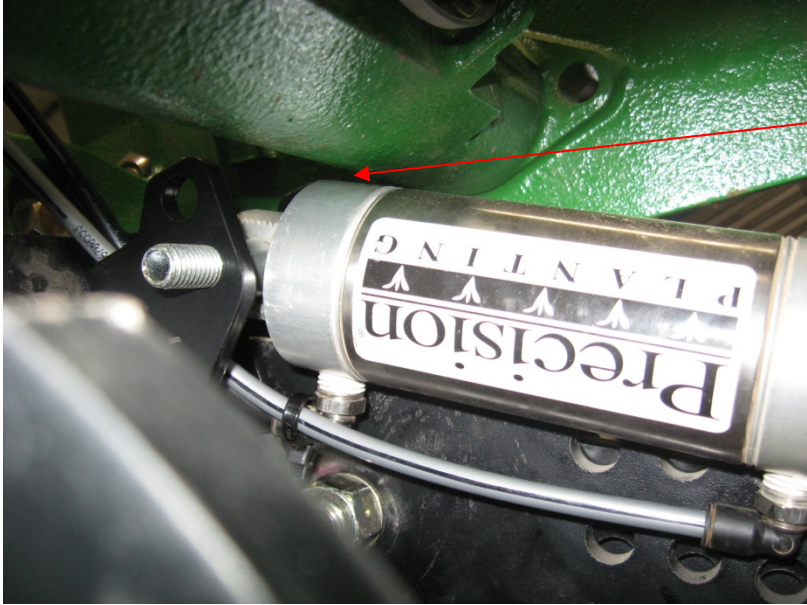

Cylinder will clear parallel arm tube when row unit is all the way up.